



Operating Instructions

DTX4200 80 Channel UHF Citizen Band Radio

Keep this user guide for future reference. Always retain your proof of purchase in case of Warranty service and register your product on line at:
AUSTRALIA: www.oricom.com.au NEW ZEALAND: www.oricom.co.nz

The ACMA increased the number of available UHF CB channels.

To provide additional channel capacity within the UHF CB Band, the ACMA has increased the number of available channels by changing from wideband to narrowband channels and adding the additional channels to the existing 40 channels. Some of the new channels are locked and cannot be used, see channel chart later in this user guide for more information.

When did this take place?

Early in 2011, new AS/NZS Standards came into effect allowing operators to use additional narrowband channels and also use narrowband transmissions on some current wideband channels. This increased the number of channels up to 80, 75 of which are useable voice channels.

What issues may users experience during the transition phase?

When a new narrowband radio receives a transmission from an older wideband radio, the speech may sound loud and distorted – simply adjust your radio volume for the best listening performance. When an older wideband radio receives a signal from a new narrowband radio, the speech may sound quieter – simply adjust your radio volume for best listening performance. When operating a narrowband radio or Channel 41 - 80 interference is possible from wideband radios transmitting on high power or on adjacent frequency.

The issues described above **are not a fault of the radio** but a consequence of mixed use of wideband and narrowband radios.

It is expected that as older wideband radios are removed from service that this issue will be resolved. Most radios in use will be narrowband eliminating this issue.

This information is current at time of printing. For further up to date information please visit www.acma.gov.au



This unit complies with all relevant Australian
and New Zealand approval requirements
AS/NZS 4365:2011



| | |
|--|----|
| Introduction | 4 |
| Important information | 5 |
| Installation of your Oricom Radio..... | 6 |
| Controls and Indicators | 8 |
| Operations | 12 |
| UHF CB channels and frequencies | 27 |
| Express Warranty (Australia) | 31 |

Need Help?

If you need assistance setting up or using your Oricom product now or in the future, call Oricom Support.

Australia 1300 889 785 or (02) 4574 8888
www.oricom.com.au
Mon-Fri 8am – 6pm AEST

New Zealand 0800 67 42 66
www.oricom.co.nz
Mon-Fri 10am – 8pm NZST

Introduction

Thank you for choosing the Oricom DTX4200 5 watt UHF CB Radio.

Key Features

Dual receive

IP54 dust and splash resistant

12/24 volt operation

3 memory groups of 16 channels per group

96 Multi-colour backlit display

Backlight brightness (5 pre-set levels plus auto)

Fast scanning 80 channels within 3 seconds

Rotary volume/channel and squelch control

Duplex

38 CTCSS & 104 DCS codes

Heavy duty diecast metal chassis

Slide-in mounting bracket

Auto power off (off/1h/2h/4h)

3.5mm external jack (for optional external speaker or PA adaptor)

Optional Accessories

External speaker

PA adaptor jack

PC programming cable and software to allow programming of memory location

Please read before installing or operating your Oricom Radio

The operation of your UHF radio in Australia and New Zealand is subject to conditions in the following licenses:

In Australia the ACMA Radio communications (Citizen Band Radio Stations) and in New Zealand by MED the General User Radio License for Citizen Band Radio.

Safety Information and Warnings



WARNING

Potentially Explosive Atmospheres

Turn your radio OFF when in any area with a potentially explosive atmosphere. Sparks in such areas could cause an explosion or fire resulting in injury or even death.

NOTE: Areas with potentially explosive atmospheres are often, but not always clearly marked. They include fuelling areas such as below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn your radio OFF near electrical blasting caps or in a “blasting area” or in areas posted: “Turn off two way radios.” Obey all signs and instructions.

Electromagnetic Interference/Compatibility

Nearly every electronic device is susceptible to electromagnetic interference (EMI). To avoid the possibility of electromagnetic interference and/or compatibility conflicts, turn off your radio in any location where posted notices instruct you to do so such as health care facilities.



CAUTION

When installing your radio in your vehicle, check that during installation you do not damage any wiring or vehicle components that may be hidden around the mounting position. Ensure the installation does not interfere with the operation of the vehicle and meets all regulatory and safety requirements for accessories fitted to your vehicle.

For optimum performance your radio needs to be installed correctly. If you are unsure about how to install your radio, we suggest you have your radio professionally installed by a UHF specialist or Auto electrician. When installing the radio, avoid mounting it close to heaters or air conditioners. Never press the PTT or CALL button before connecting the antenna to the radio.

Wiring Methods

There are two possible wiring configurations for connecting to the vehicles power supply.

A. Radio stays ON when the ignition is switched OFF

Connect the radio's negative (black) lead to the vehicle chassis, or directly to the battery's negative terminal.

Connect the radio's positive (red) lead via the 2 Amp fuse to the battery's positive terminal. Alternatively, the positive lead could be connected at the fuse box at a point that has DC Power continuously available (preferably the battery side of the ignition switch) via the 2 Amp fuse.

B. Radio turns OFF with the ignition switch

Connect the radio's negative (black) lead to the vehicle's chassis, or directly to the battery's negative terminal.

The radio's positive (red) lead should connect to an accessory point in the vehicle's fuse box via the 2 Amp fuse.

Antenna information

The antenna (not supplied) is of critical importance, to maximize your output power and receiver sensitivity.

A poorly installed, inferior quality antenna or one not designed for the correct frequency band will give poor performance. You should only purchase an antenna designed for the 477MHz frequency band.

Antenna installation

1. Connect the antenna to the rear antenna socket using a PL259 coaxial connector (not supplied).
2. To obtain maximum performance from the radio, select a high quality antenna and mount it in a good location. **Never press the PTT or CALL button before connecting the antenna to the radio.**
3. For best performance always mount your antenna as high as possible and away from all other antennas or poles.

Optional External Speaker

Depending on the installation it may be necessary to use an external speaker (not supplied) to give improved volume and clarity. This can be plugged into the EXT –SPK socket on the rear of the unit.


Controls and Indicators

Front View




1. Power on/off and Volume/channel/squelch selector and SVL (sub receiver volume)
2. Scan (open scan/memory group scan)/remove memory
3. Memory recall/memory write
4. Main & Sub channel swapping/SRX on/off
5. Menu/Group tone scan
6. Microphone
7. LCD display

Rear View

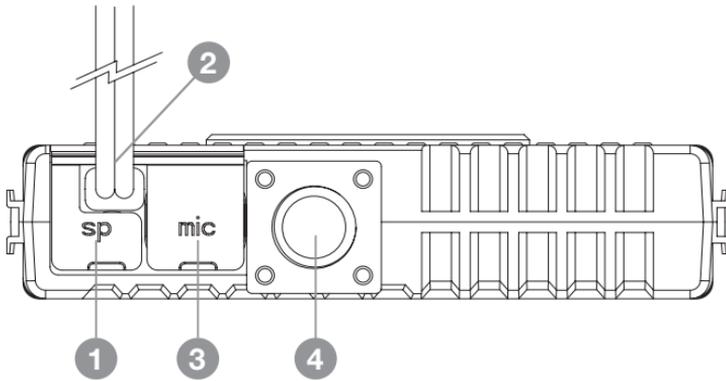

1. 3.5mm external jack for optional 8 ohm speaker and PA speaker
2. Power supply connection
3. Computer programming connector
4. Antenna Connection

LCD Icons & Indicators

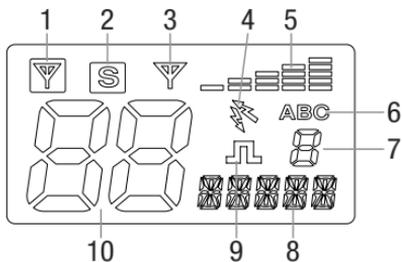

- | | |
|-------------------------------|-----------------------------------|
| 1. Sub receiver busy | 6. Group display (A, B, C groups) |
| 2. Sub receiver on | 7. Group address channel |
| 3. Main receiver busy | 8. Status display |
| 4. Duplex on | 9. CTCSS or DCS on |
| 5. Signal strength & TX power | 10. Channel display |


Installation of the DTX4200 and fitting optional accessories

Mounting the UHF radio


The universal mounting bracket supplied with your UHF radio allows overhead/dash mounting.

Mount the UHF radio via the bracket, securely with the supplied screws in the desired location, ensuring the surface is sturdy and can support the weight of the radio.


TO MOUNT: SLIDE
INTO UNIVERSAL
MOUNTING BRACKET

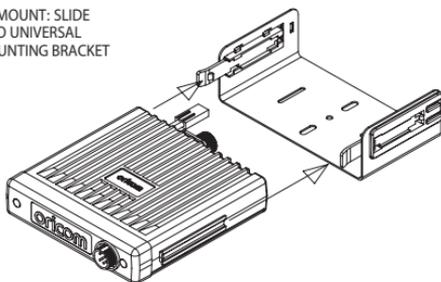

TO REMOVE: SLIDE OUT
HOLDING
BRACKETS AWAY FROM
UHF RADIO

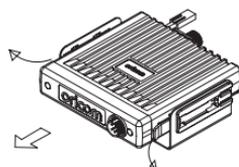

Installation Diagram

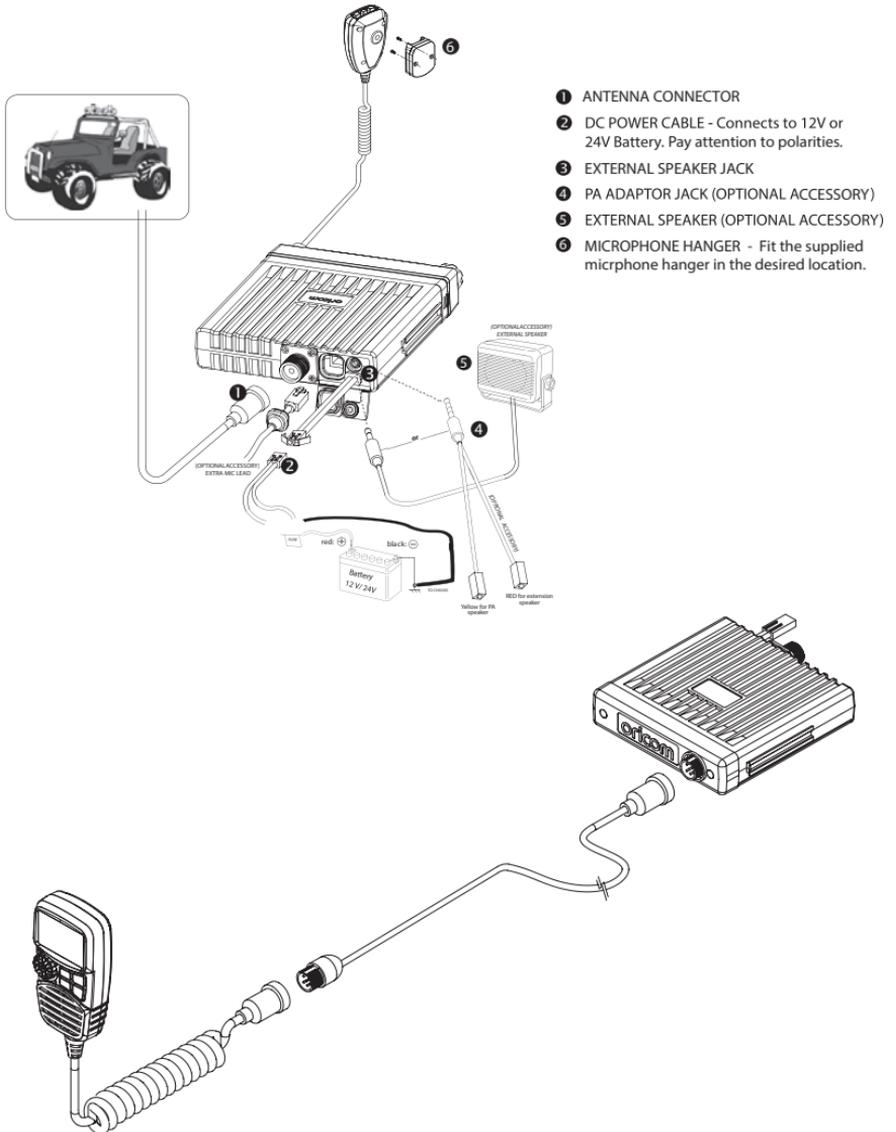

Operations

Turning on the Power

Press and hold the channel selector.



Setting the Volume

Rotate the channel selector clockwise to adjust the sound level for comfortable reception.



Selecting a channel

Press channel selector once. "CH" will appear on the LCD.

Select the channel by rotating the channel selector, Clockwise Channel UP, anti-clockwise Channel DOWN.



Setting the Squelch Level

1. Press channel selector 2 times. The current squelch level is displayed.
2. Select the squelch level by rotating the channel selector.

1 - Max sensitivity (Min. squelch)

15 - Min. sensitivity (Max/Tight squelch)

Off - Open squelch



Setting SRX (Sub Receiver) Volume

1. Press channel selector 3 times, then "SVL" is displayed.
2. Rotate the channel selector to adjust the SRX volume.

Note :

- * If a button is not pressed within 2 seconds the radio will automatically exit the sub display of "VOL" "CH" "SQL" and "SVL".

PTT (Push-To-Talk) button

Pressing the PTT button activates the transmitter.

The RF (radio frequency) level will appear on the LCD display as you are transmitting.

To receive, release the PTT button, TX will disappear on the LCD display.

When transmitting, hold the Mic two inches (5cm) from your mouth and speak clearly in a normal voice across the front of the Mic area.

Scanning

The Scan feature allows you to search for active channels automatically.

There are 3 scanning modes:

Open Scan, Group Memory Scan and Group tone Scan (a special case of Group Memory Scan).


Open scan

Press SCAN/RM to start scan. The OS-SC sub menu display will appear on the LCD display.

When a signal is found, scanning will stop at that channel to allow the signal to be heard, then resume scanning when the channel is clear again.

The scan resume time can be set to 5, 10 or 15 seconds of P5 (default).

ch  1-2-3-4-5-6-7 77-78-79-80 

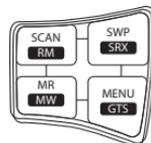

Note: During open scan rotating the channel selector will not change the scan direction.

To stop the scan, press the SCAN/RM button or press the PTT.

Remove Memory in Scanning

To remove a channel from the scan, press and hold SC/RM button for 2 seconds.

The channel will be removed from the current scan. When the scan stops, the removed channel will be reinstated.

2 sec



For example we are removing CH02 from the scan. You may want to remove this channel due to constant noise.

1. Press SC/RM button for 2 seconds.
2. Scanning will resume.
3. Channel 02 is removed from this scan.

Scan 1-2-3-4-5-6-7 77-78-79-80

RM Scan 1-3-4-5-6-7 77-78-79-80

Note: Up to 10 channels can be removed for the current scan.

Group Memory Scan

Memory scan must be stored to the memory channels in groups A to C. Refer to memory recall function on page 16.

1. Press MR/MW button to change between A, B, C and flashing A, B, C.

When A, B, C are flashing, then all groups will be scanned starting in selected group. When A, B and C are not flashing, then only the selected group will scan.

2. Press Scan button to start group scan.

The MS-SC sub menu display appears on the LCD.

3. To stop Group memory Scan, press SCAN/RM button or PTT.

Group Tone Scan

When Group Tone Scan is enabled, it will allow continual communication across congested channels.

Group tone scan channels stored into Group memory scan and only opens the squelch for signals with the correct subcode (38 CTCSS or 104 DCS tone).


To achieve this, all radios in your group must have the same channels in A, B, C memory (group memory channels) and use the same Subcode (38 CTCSS and 104 DCS tone).

By scanning only group channels, radios in the network will be able to detect and receive group transmissions which will be continual communication without interruption. When transmitting in this mode, the radio switches to an unused group channel if it detects another signal with no code/the wrong code, on the channel last used by the group.

1. Press and hold MENU/GTS button to activate Group Tone Scan.

All group tone scan stored into Group memory channel and CTCSS 01 (67Hz) is set for Group Tone Scan.

The group tone code can be changed in the settings menu.

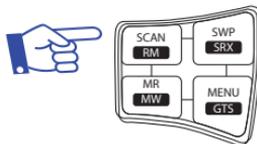

2. To stop Group memory Scan, Press MENU/GTS button or PTT.

Memory Recall

This feature allows the user to recall the stored channels using the MR button.

To access the stored channels, simply press the "MR" button, and the "A" will appear at the right side on the LCD. Press the MR button again to cycle through A - B - C groups and flashing A - B - C.

When A, B and C are flashing, press SC/RM button to start all memory group scanning.

For scanning A, B or C only, select non flashing preferred group (A, B or C) press SC/RM.

The DTX4200 has no information stored in the memory channels.

Memory Write

Select the channel you want to store.

For this example we will write CH09 to B group and group channel 8.

1. Press and hold the MR/MW button to store a channel.

"A" will appear and the group channel will flash.

2. Press MR/MW button to select B group.

3. Press channel selector to engage CH mode.

4. Rotate channel selector until 8 is shown in group channel display.



5. Press and hold MR/MW button to save & exit from memory write.

SWP (Swapping Dual RX channel)

The DTX4200 can receive two channels simultaneously.


The main receiver default channel is 12 and Sub receiver default channel is 40.

The Sub channel can be turned on and off by pressing and holding the SWP/SRX button. The "S" indicator on the display will be on if the SRX is on.

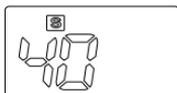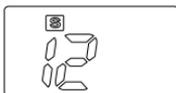

It is not possible to transmit on the SRX channel you must swap the SRX and Main RX to transmit on that channel.

To adjust the volume of the SRX channel, push the channel change selector 3 times, the display will show SVL and the level. Adjust desired volume level by rotating channel change selector, the setting will automatically save, press PTT to exit.

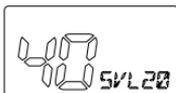

SRX On/Off

Press and hold SWP/SRX button to turn SWP/SRX off.





To return to Dual RX mode, press and hold the SRX button for 2 seconds.




Menu list

- * Press MENU/GTS button to access menu.
- * Use the channel selector to change the value of each setting.
- * If a button is not pressed within 8 seconds the radio will automatically exit the menu mode.
- * You can exit the menu at any time by briefly pressing PTT button.
- * Please see below menu modes.

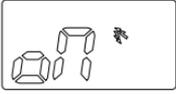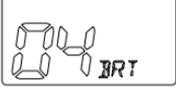

| Function | Step | Display | Default |
|----------------------|-----------|---|--------------|
| Duplex On/Off | Off |  | On |
| | On | | |
| CTCSS and DCS | Off |  | Off |
| | to 104 | | |
| Group Tone Scan | CT1(67Hz) |  | CT1 (67Hz) |
| | DCS104 | | |
| Backlight LED colour | 0 |  | 87(Sky Blue) |
| | to 95 | | |
| Backlight Dimmer | auto |  | 4 |
| | to 5 | | |
| Factory Reset | User |  | User reset |
| | Factory | | |
| Squelch tail | Off |  | Off |
| | On | | |


Operations
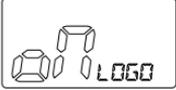
| | | | |
|-------------------|----------|---|-----|
| Busy channel lock | Off |  | Off |
| | On | | |
| Key Beep | Off |  | Off |
| | On | | |
| Logo Display | On |  | On |
| | Off | | |
| TPI | On |  | On |
| | Off | | |
| Treble | 0 |  | 2 |
| | to | | |
| | 7 | | |
| Scan resume time | P5 |  | P5 |
| | to | | |
| | 5,10,15 | | |
| Auto power Off | Off |  | Off |
| | to | | |
| | 1H,2H,4H | | |
| Software version | VER-- 1 | | |

Duplex

General

Your radio has a Repeater Access function to allow use of local repeater stations (if available in your area). Repeaters are shared radio systems installed by interested parties (clubs, local business etc.) that receive transmissions on specific channels and re-transmit (or repeat) the received signal to another channel.

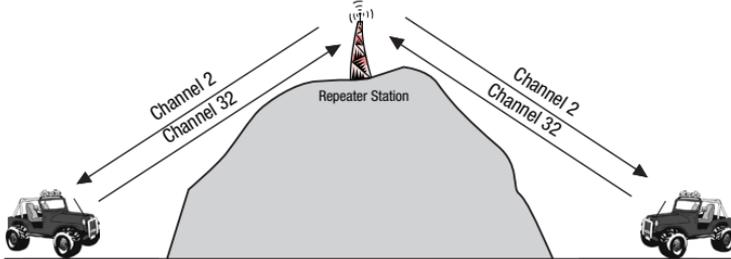

The Repeater Access function can be set (from channel 1 to 8 and 41 - 48) used by local repeater stations. When activated, your radio will receive the Repeater on its specific channel (all repeater outputs are on channel 1 to 8 and 41 to 48) but transmit to the repeater channel 31 through 38 and 71 to 78.

(Factory default is set to On for all repeater channels).

e.g.

CH01 on Duplex mode will receive on CH01 but transmit on CH31.

CH02 on Duplex mode will receive on CH02 but transmit on CH32.

If you transmit on CH01 duplex mode, you are actually transmitting on CH31.

The repeater station receives your signal on CH31 and retransmits on CH01.

Your UHF radio allows you to pre-select Duplex operation individually on each channel.

| CH and Number | Simplex mode Transmit/Receiver | Duplex mode Transmit/Receiver |
|---------------|--------------------------------|-------------------------------|
| | Frequency (MHz) | Frequency (MHz) |
| 1 | 476.425 | 477.175 CH31 |
| 2 | 476.450 | 477.200 CH32 |
| 3 | 476.475 | 477.225 CH33 |
| 4 | 476.500 | 477.250 CH34 |
| 5 | 476.525 | 477.275 CH35 |
| 6 | 476.550 | 477.300 CH36 |
| 7 | 476.575 | 477.325 CH37 |
| 8 | 476.600 | 477.350 CH38 |
| 41 | 476.4375 | 477.1875 CH71 |
| 42 | 476.4625 | 477.2125 CH72 |
| 43 | 476.4875 | 477.2375 CH73 |
| 44 | 476.5125 | 477.2625 CH74 |
| 45 | 467.5375 | 477.2875 CH75 |
| 46 | 476.5625 | 477.3125 CH76 |
| 47 | 476.5875 | 477.3375 CH77 |
| 48 | 476.6125 | 477.3625 CH78 |

For this example we are adopting CH01 as the channel being used for repeater use.

1. Press Menu to display Duplex setting.
2. Turn the channel selector to change the setting between ON and OFF.
Note: You can only turn Duplex on when you are on a duplex channel.
3. Press PTT to save & exit from the menu mode.
4. Duplex on icon is displayed when a selected channel is set to Duplex mode. See LCD Icons & Indicators on page 10 No.3.

CTCSS and DCS setting

This feature allows you to receive signals only from callers who have selected the same CTCSS and DCS code.

DCS is similar to CTCSS. It provides 104 extra, digitally coded, squelch codes that follow after the 38 CTCSS codes. CTCSS 1 - 38, followed by DCS 1 - 104. (Displays A0 to A4 for 100 to 104)

CTCSS and DCS are not available on CH05 and CH35. For your reference a list of the available channels, corresponding frequencies and guidelines for their use and selection is in the CTCSS and DCS channel list on pages 29 and 30.

For Australia, channel 05 and 35 are reserved for Emergency calls.

Group Tone setting

The group tone scan default tone selected is CTCSS 01 (67Hz).

You can select from CTCC 01 - 38 to DCS 01 to 104 code for Group tone scan.

96 Multi-colour Backlight

You can select from 96 different multi-colour backlighting for the LCD backlight.

Backlight dimmer

You can reduce the brightness of the backlight by selecting levels 1 to 5, off or Auto, which will adjust the level of brightness depending on ambient light.

Factory Reset

To reset your radio, press and hold SCAN/RM button while turning the power on.

The display "AL-reset" or "User-reset" will indicate reset type.

The reset type can be selected in menu mode.

User reset will not delete any stored memory channels.

AL-reset will clear all memory channels and reset all settings back to factory.

Squelch Tail

Squelch Tail is the noise heard after the transmitting party releases the PTT and is heard by the receiving party.

If Squelch tail is turned OFF, on both radios this squelch noise will be muted.

Busy channel Lock

If the channel is already in use, you can prevent the UHF CB radio from accidentally transmitting over a channel already in use. This is particularly important when using CTCSS/DCS.

Key Beep

The key beep emits a tone when you press any of the buttons on the microphone (except PTT button).

Logo Display

The logo display function can be enabled or disabled.

TPI

TPI Transmit Power Indicator

VSWR Voltage Standing Wave Ratio is a measurement of how well the antenna (and cable) is matched to the radios output. It is best measured at the antenna as the cable can affect this measurement.

TPI indicates the level of RF power delivered to the antenna connector.

This allows you to see how well the antenna is matched to the UHF radio.

Generally a VSWR of less than 2 is an acceptable match.



Correct Antenna install with 5W



VSWR 1.2 with 4.5W



VSWR 2.6 with 4W



VSWR 3.5 with 3.5W



VSWR 4.4 with 3W



< 3W

The VSWR and Power test can vary depending on installation conditions. If TPI feature is turned off in the settings menu, the TPI indicator will show 5 bars during TX.

If an incorrect or no antenna is connected and power output is less than 3.5W, “ANT-X” will be displayed when TPI feature is turned on or off.

When “ANT-X” is displayed, the radio has enabled protection mode and reduced RF output.

Treble

Allows adjustment of the level of higher audio frequencies of the radio speaker in 8 steps, use channel selector to select desired level.

Scan resume time


You can select 5, 10, or 15 sec depending on your selection. SCAN will start again after a 5, 10, or 15 sec pause even though a signal is still present.

If P5 is selected, SCAN will stop on all channels as long as a signal is present. It will then resume SCAN again 5 seconds after no transmission is present.

Auto power OFF

The auto power off function is activated when no transmitting and no key function is present for the time selected.

The automatic power off time can be adjusted to OFF, 1, 2, or 4 hours in menu mode.

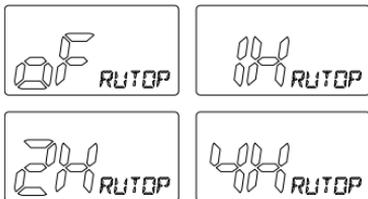

PA (Public Address)

To use the external PA speaker, connect the optional PA cable to the external speaker jack on the rear of the radio, connect the PA speaker to the yellow coloured socket and the external CB speaker to the red coloured socket. Then the output will be directed to the PA speaker when PA function is selected.

How to operate the Public Address

1. Press and hold the PTT while turning the power on.
2. Press the PTT and speak into the microphone, the audio will be transmitted through the PA speaker.
3. You can adjust the volume using the volume control.
4. To exit PA mode turn radio off and back on.

UHF CB channels and frequencies

| Channel | | Tx Freq | Rx Freq | Channel | | Tx Freq | Rx Freq |
|---------|-----|----------|----------|---------|-----|----------|----------|
| | | MHZ | MHz | | | MHz | MHz |
| 01* | | 476.4250 | 476.4250 | 21 | | 476.9250 | 476.9250 |
| | 41* | - | 476.4375 | | 61‡ | — | — |
| 02* | | 476.4500 | 476.4500 | 22† | | 476.9500 | 476.9500 |
| | 42* | - | 476.4625 | | 62‡ | — | — |
| 03* | | 476.4750 | 476.4750 | 23† | | 476.9750 | 476.9750 |
| | 43* | - | 476.4875 | | 63‡ | — | — |
| 04* | | 476.5000 | 476.5000 | 24 | | 477.0000 | 477.0000 |
| | 44* | - | 476.5125 | | 64 | 477.0125 | 477.0125 |
| 05* | | 476.5250 | 476.5250 | 25 | | 477.0250 | 477.0250 |
| | 45* | - | 476.5375 | | 65 | 477.0375 | 477.0375 |
| 06* | | 476.5500 | 476.5500 | 26 | | 477.0500 | 477.0500 |
| | 46* | - | 476.5625 | | 66 | 477.0625 | 477.0625 |
| 07* | | 476.5750 | 476.5750 | 27 | | 477.0750 | 477.0750 |
| | 47* | - | 476.5875 | | 67 | 477.0875 | 477.0875 |
| 08* | | 476.6000 | 476.6000 | 28 | | 477.1000 | 477.1000 |
| | 48* | - | 476.6125 | | 68 | 477.1125 | 477.1125 |
| 9 | | 476.6250 | 476.6250 | 29 | | 477.1250 | 477.1250 |
| | 49 | 476.6375 | 476.6375 | | 69 | 477.1375 | 477.1375 |
| 10 | | 476.6500 | 476.6500 | 30 | | 477.1500 | 477.1500 |
| | 50 | 476.6625 | 476.6625 | | 70 | 477.1625 | 477.1625 |
| 11 | | 476.6750 | 476.6750 | 31* | | 477.1750 | 477.1750 |
| | 51 | 476.6875 | 476.6875 | | 71* | 477.1875 | - |
| 12 | | 476.7000 | 476.7000 | 32* | | 477.2000 | 477.2000 |
| | 52 | 476.7125 | 476.7125 | | 72* | 477.2125 | - |
| 13 | | 476.7250 | 476.7250 | 33* | | 477.2250 | 477.2250 |
| | 53 | 476.7375 | 476.7375 | | 73* | 477.2375 | - |
| 14 | | 476.7500 | 476.7500 | 34* | | 477.2500 | 477.2500 |
| | 54 | 476.7625 | 476.7625 | | 74* | 477.2625 | - |
| 15 | | 476.7750 | 476.7750 | 35* | | 477.2750 | 477.2750 |
| | 55 | 476.7875 | 476.7875 | | 75* | 477.2875 | - |
| 16 | | 476.8000 | 476.8000 | 36* | | 477.3000 | 477.3000 |
| | 56 | 476.8125 | 476.8125 | | 76* | 477.3125 | - |
| 17 | | 476.8250 | 476.8250 | 37* | | 477.3250 | 477.3250 |
| | 57 | 476.8375 | 476.8375 | | 77* | 477.3375 | - |
| 18 | | 476.8500 | 476.8500 | 38* | | 477.3500 | 477.3500 |
| | 58 | 476.8625 | 476.8625 | | 78* | 477.3625 | - |
| 19 | | 476.8750 | 476.8750 | 39 | | 477.3750 | 477.3750 |
| | 59 | 476.8875 | 476.8875 | | 79 | 477.3875 | 477.3875 |
| 20 | | 476.9000 | 476.9000 | 40 | | 477.4000 | 477.4000 |
| | 60 | 476.9125 | 476.9125 | | 80 | 477.4125 | 477.4125 |

* The primary use for these channels is repeater operation using 750 kHz offset. Channels 1-8 inclusive are used for mobile reception and channels 31-38 for mobile transmission. Note that additional channels 41-48 and 71-78 may also become available for repeater operation to supplement channels 1-8 and 31-38 respectively as approved by the ACMA CBRS Class Licence in Australia and the MED GURL in New Zealand. This radio is user upgradable at no cost if the Class Licence is amended to allow repeater use on channels 41-48 and 71-78. Details will be made available on our website on how to upgrade the radio to use the repeater channels, if and when approval by the ACMA CBR S Class Licence in Australia and the MED GURL in New Zealand. In addition, any designated repeater channel may be used for simplex operation in areas where it is not used for repeater operation.

† Speech telephony shall be inhibited on these channels.

‡ At the time of production Channels 61, 62 and 63 are guard channels and are not available for use.

Channels 5 and 35 (paired for Duplex repeaters) are reserved as emergency channels and should be used only in an emergency.

CTCSS and DCS will not operate on these channels.

A list of currently authorised channels can be obtained from the ACMA website in Australia and the MED website in New Zealand. Channel 11 is a calling channel generally used to call others and channel 40 is the customary road vehicle channel.

Once contact is established on the calling channel, both stations should move to another unused "SIMPLEX" channel to allow others to use the calling channel.

UHF CB Radios normally transmit and receive on the same frequency which is known as the simplex operation.

Channels 22 and 23 are for Telemetry and Telecommand use, voice communications are not allowed on these channels by law.

Channel 9 and above are the best choices for general use in Simplex mode.

38 CTCSS CODE LIST

| CODE | Frequency(Hz) | CODE | Frequency(Hz) |
|------|---------------|------|---------------|
| OFF | OFF | 20 | 131.8 |
| 1 | 67.0 | 21 | 136.5 |
| 2 | 71.9 | 22 | 141.3 |
| 3 | 74.4 | 23 | 146.2 |
| 4 | 77.0 | 24 | 151.4 |
| 5 | 79.7 | 25 | 156.7 |
| 6 | 82.5 | 26 | 162.2 |
| 7 | 85.4 | 27 | 167.9 |
| 8 | 88.5 | 28 | 173.8 |
| 9 | 91.5 | 29 | 179.9 |
| 10 | 94.8 | 30 | 186.2 |
| 11 | 97.4 | 31 | 192.8 |
| 12 | 100.0 | 32 | 203.5 |
| 13 | 103.5 | 33 | 210.7 |
| 14 | 107.2 | 34 | 218.1 |
| 15 | 110.9 | 35 | 225.7 |
| 16 | 114.8 | 36 | 233.6 |
| 17 | 118.8 | 37 | 241.8 |
| 18 | 123.0 | 38 | 250.3 |
| 19 | 127.3 | | |

DCS codes table

| Code NO. | DCS Code (Octal) | Code NO. | DCS Code (Octal) | Code NO. | DCS Code (Octal) |
|----------|------------------|----------|------------------|----------|------------------|
| 1 | 023 | 36 | 223 | 71 | 445 |
| 2 | 025 | 37 | 225 | 72 | 446 |
| 3 | 026 | 38 | 226 | 73 | 452 |
| 4 | 031 | 39 | 243 | 74 | 454 |
| 5 | 032 | 40 | 244 | 75 | 455 |
| 6 | 036 | 41 | 245 | 76 | 462 |
| 7 | 043 | 42 | 246 | 77 | 464 |
| 8 | 047 | 43 | 251 | 78 | 465 |
| 9 | 051 | 44 | 252 | 79 | 466 |
| 10 | 053 | 45 | 255 | 80 | 503 |
| 11 | 054 | 46 | 261 | 81 | 506 |
| 12 | 065 | 47 | 263 | 82 | 516 |
| 13 | 071 | 48 | 265 | 83 | 523 |
| 14 | 072 | 49 | 266 | 84 | 526 |
| 15 | 073 | 50 | 271 | 85 | 532 |
| 16 | 074 | 51 | 274 | 86 | 546 |
| 17 | 114 | 52 | 306 | 87 | 565 |
| 18 | 115 | 53 | 311 | 88 | 606 |
| 19 | 116 | 54 | 315 | 89 | 612 |
| 20 | 122 | 55 | 325 | 90 | 624 |
| 21 | 125 | 56 | 331 | 91 | 627 |
| 22 | 131 | 57 | 332 | 92 | 631 |
| 23 | 132 | 58 | 343 | 93 | 632 |
| 24 | 134 | 59 | 346 | 94 | 654 |
| 25 | 143 | 60 | 351 | 95 | 662 |
| 26 | 145 | 61 | 356 | 96 | 664 |
| 27 | 152 | 62 | 364 | 97 | 703 |
| 28 | 155 | 63 | 365 | 98 | 712 |
| 29 | 156 | 64 | 371 | 99 | 723 |
| 30 | 162 | 65 | 411 | 100(do0) | 731 |
| 31 | 165 | 66 | 412 | 101(do1) | 732 |
| 32 | 172 | 67 | 413 | 102(do2) | 734 |
| 33 | 174 | 68 | 423 | 103(do3) | 743 |
| 34 | 205 | 69 | 431 | 104(do4) | 754 |
| 35 | 212 | 70 | 432 | | |

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

Nothing in this Express Warranty excludes, restricts or modifies any condition, warranty, guarantee, implied term, right or remedy pursuant to the Australian Consumer Law and which may not be so excluded, restricted or modified. For such conditions, terms, guarantees and warranties that cannot be excluded, restricted or modified, Oricom limits the remedies available to extent permitted in the relevant legislation.

The Express Warranty Period will be 5 years from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded

Express Warranty (Australia)

product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Wilful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 1300 889 785 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email or fax a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the goods for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

Important Information

Repair Notice

Please be aware that the repair of your goods may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your goods before sending for repair. Please also be aware that goods presented for repair may be replaced by refurbished goods or parts of the same type rather than being repaired.

ORICOM CUSTOMER SUPPORT

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

1300 889 785

Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au

www.oricom.com.au

Oricom Support - New Zealand

0800 674 266

Monday - Friday 11am - 7pm NZST

Email: support@oricom.co.nz

www.oricom.co.nz



Contact Details for Oricom Support and Warranty claims in Australia

Oricom International Pty Ltd
Unit 1, 4 Sovereign Place
South Windsor, NSW 2756 Australia

Email: support@oricom.com.au Phone:
1300 889 785 or (02) 4574 8888
(Monday to Friday 8am to 6pm AEST)
Web: www.oricom.com.au
Fax: (02) 4574 8898

Contact details for Oricom Support and Warranty Claims in New Zealand

Email: support@oricom.co.nz
Phone: 0800 674 266
(Monday to Friday 10am to 8pm NZST)
Web: www.oricom.co.nz


ANU1100 Pack Includes:

- 3dBi UHF CB Antenna with heavy duty custom spring base (length 430mm)
- 600mm Fiberglass extension whip to convert to a 1m 6.5dBi high gain antenna
- Includes grub screw and hex key to secure the fiberglass whip.

IMPORTANT

Always fit in accordance with your State road & traffic safety guidelines.

Installation

- 1) Install the 430mm 3dBi base and pole (Stubbie Antenna) onto the bracket (not supplied). Tighten in a clockwise direction, using a hexagon wrench or spanner. **IMPORTANT:** Do not exceed 50N

To convert to a 1m 6.5dBi gain antenna

- 2) Remove the cap from the 3dBi Stubbie antenna by turning in an anti-clockwise direction. **IMPORTANT:** Place the cap in a safe place - always operate the 3dBi Stubbie antenna with the cap fitted.



- 3) Install the Fiberglass extension whip onto the base by turning in a clockwise direction and secure in place with the grub screw (using the hex key provided). Hand tighten only MAX. 15N



Images are for illustration purposes only.

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom". Oricom products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

Nothing in this Express Warranty excludes, restricts or modifies any condition, warranty, guarantee, implied term, right or remedy pursuant to the Australian Consumer Law and which may not be so excluded, restricted or modified. For such conditions, terms, guarantees and warranties that cannot be excluded, restricted or modified, Oricom limits the remedies available to extent permitted in the relevant legislation.

The Express Warranty Period will be 3 years from the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable. Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer.

During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom.

In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance. No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. wilful misconduct or deliberate misuse by you of the product;
3. any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

Express Warranty (Australia)

How to make a claim under your Express Warranty in Australia Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 1300 889 785 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email or fax a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the goods for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:
Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

Important Information

Repair Notice

Please be aware that the repair of your goods may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your goods before sending for repair.

Please also be aware that goods presented for repair may be replaced by refurbished goods or parts of the same type rather than being repaired.